


# Baikal Miner P2Pool Guide


The p2pool difficulty is too low for baikal miner.

So you have to set the appropriate difficulty to your user filed.

1. Run chrome browser -> Enter you ip address -> Enter password ( default : baikal)

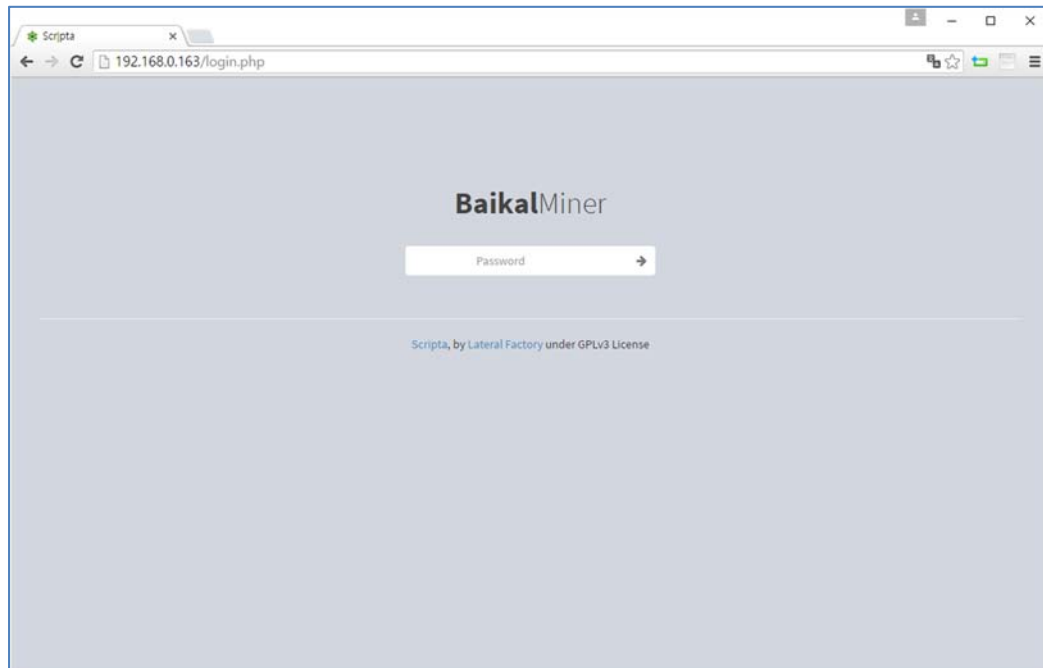


2. Click the terminal menu -> Baikal login : **baikal**, Password : **baikal**

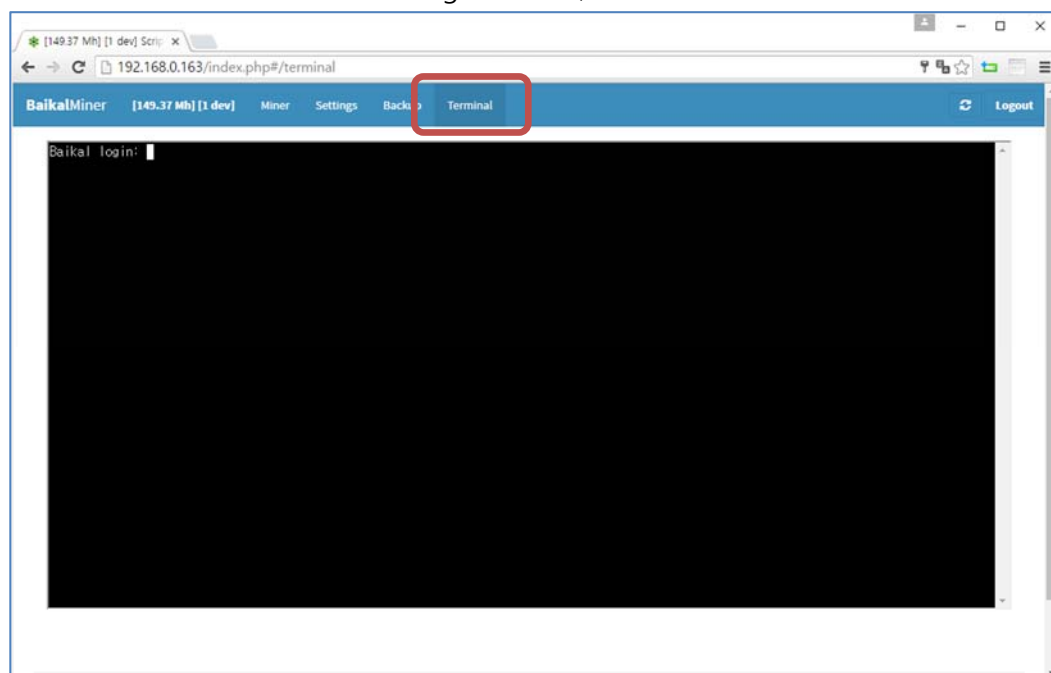

3. Edit miner.conf with "vi" or "pico" editor.

```
$ sudo vi /opt/scripta/etc/miner.conf
```

```
$ sudo pico /opt/scripta/etc/miner.conf
```

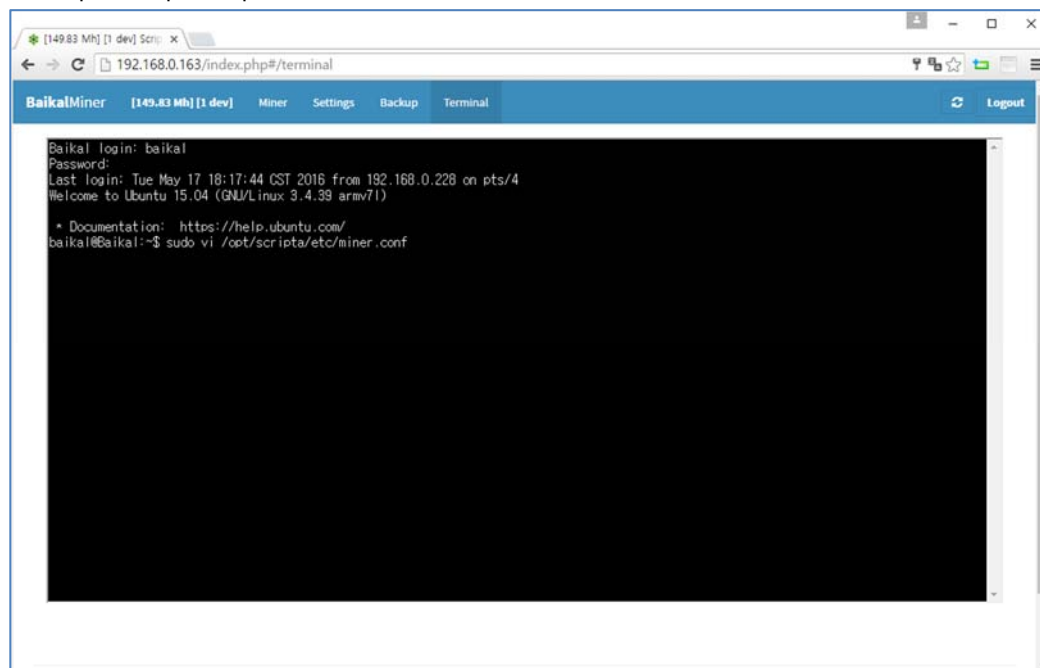


4. Add Pseudo Share Difficulty to your address and save it.

```
"user": "XpoDRqoJctfbXTicxFc5vBLg9Zq4yixta4",
```


```
->
```

```
"user": "XpoDRqoJctfbXTicxFc5vBLg9Zq4yixta4/+0.08",
```

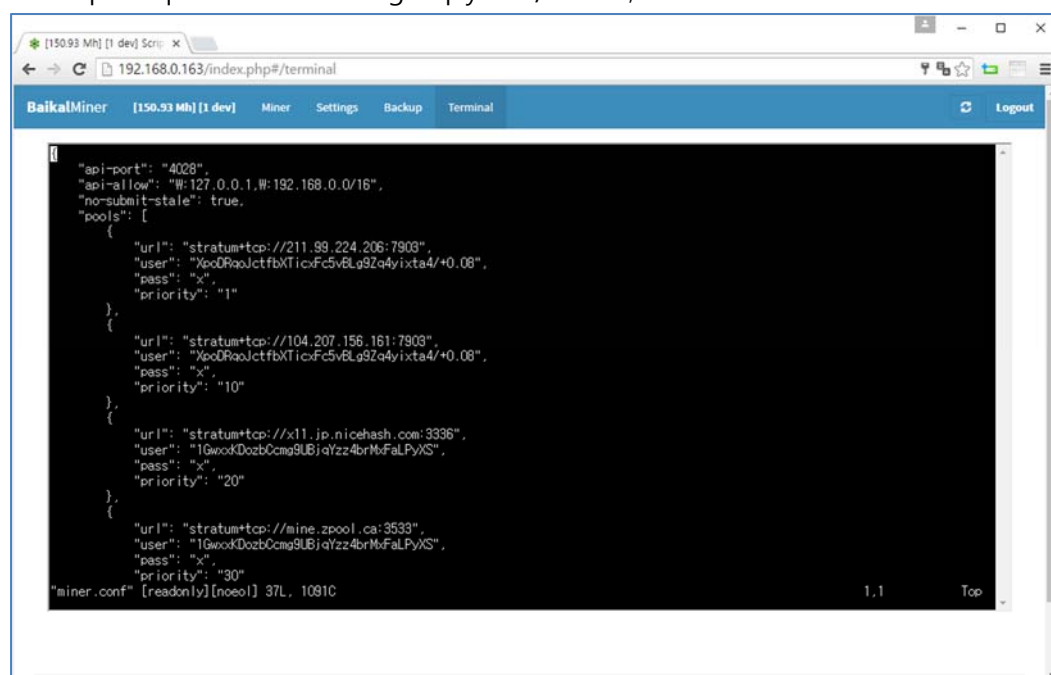

## 5. Restart miner

Menu -> Miner -> Miner command -> Cgminer soft reset(RPC)

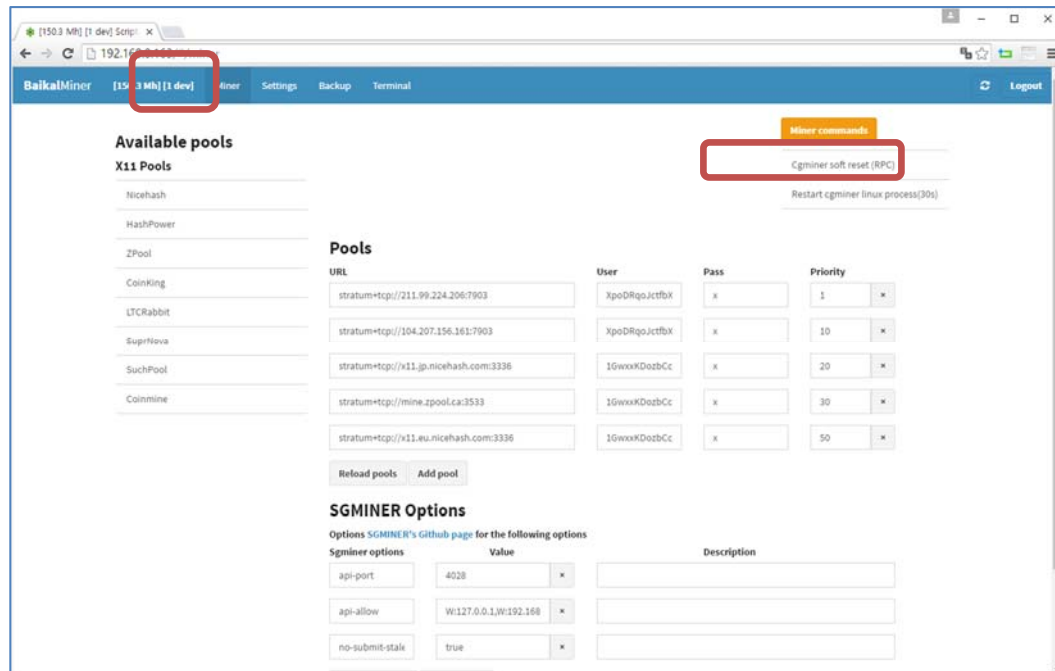

## Reference

<http://xpool.net/faq.html>