

 
Baikal Miner P2Pool Guide

The p2pool difficulty is too low for Baikal miner.


So you have to set the appropriate difficulty to your user filed.

Before add the P2Pool server, install the "[OrangePI-PC_8G_V1.1_0517.img](#)" to the Baikal miner.

1. Run browser -> Enter you ip address -> Enter password (default : baikal)

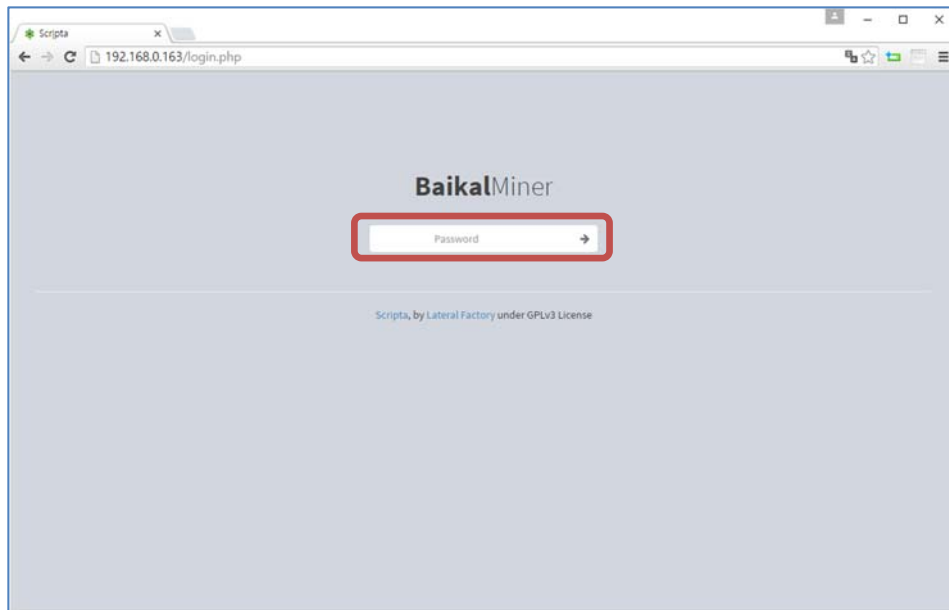

2. Click the Miner Menu -> Add Pool

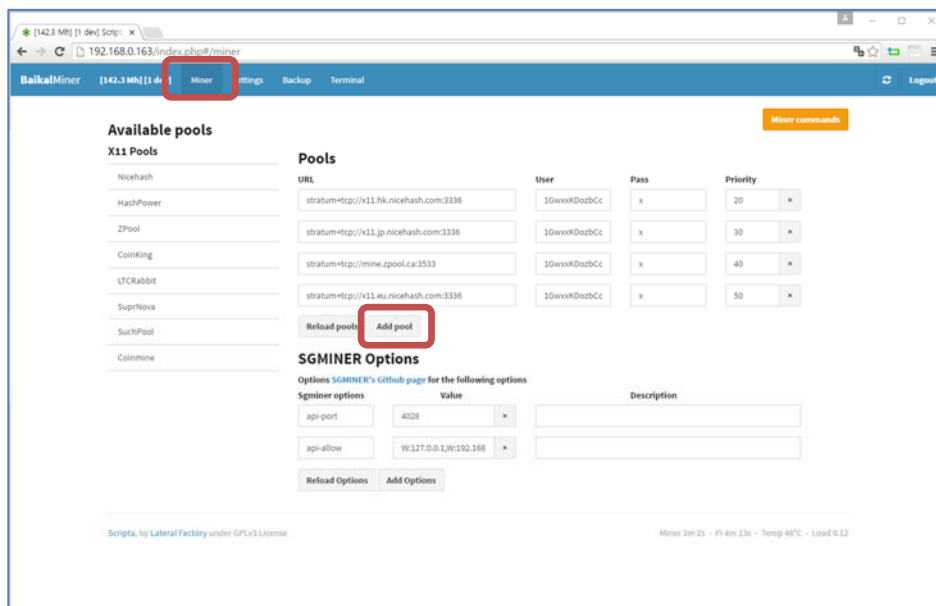

3. Add P2Pool Server -> Save Pools

Ex) URL : stratum+tcp://211.99.224.206:7903

User(wallet address) : XpoDRqoJctfbXTicxFc5vBLg9Zq4yixta4/+0.08

Pass : x

Priority : 10


***Notice : You must add the '/+0.08' end of wallet address.**

The screenshot shows the BaikalMiner web interface. In the 'Pools' section, a new pool is being added with the following details:

URL	User	Pass	Priority
stratum+tcp://211.99.224.206:7903	XpoDRqoJctfb	x	10

The 'Add pool' button is highlighted in green. Below the pools list, the 'SGMINER Options' section is visible, showing options for 'api-port' (4028) and 'api-allow' (127.0.0.1, 192.168.0.0/24).

4. Done.

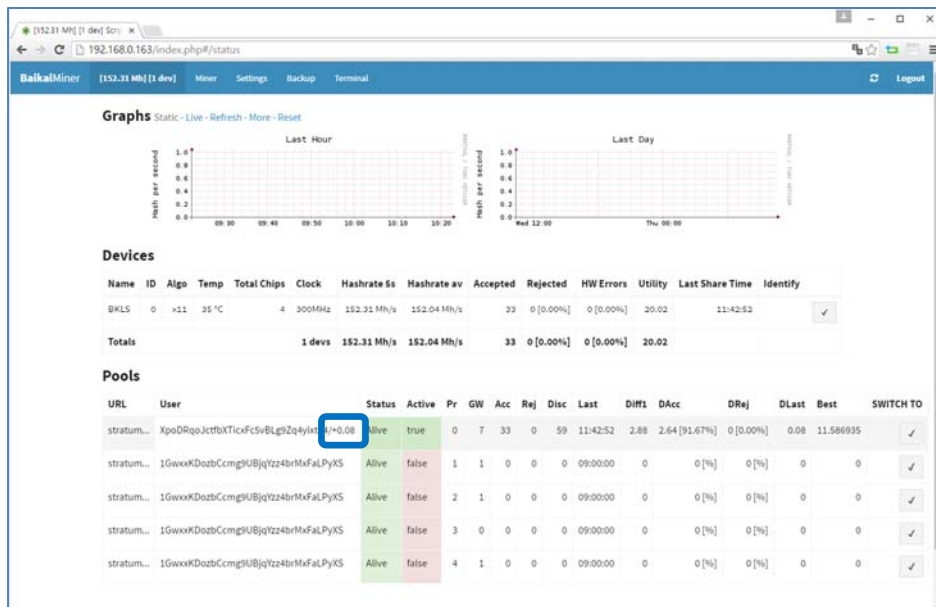

Download

<http://pan.baidu.com/s/1dFg9rZ7>

Reference

<http://xpool.net/faq.html>

<http://www.p2poolminning.us/p2poolnodes/>